

GB INSTRUCTIONS FOR THE USE AND CARE OF WAHL CLIPPERS

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the points listed below.

(Read all instructions before using.)

DANGER

To reduce the risk of death or injury by electric shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately. Some electrical parts inside the clipper are electrically live, even with the switch "off".
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place it on or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never use this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to Wahl Clipper Corporation for examination and repair.
- Keep the cord away from heated surfaces.
- Never operate the appliance with the air openings blocked or while on a soft combustible surface, such as a bed or couch, where air openings may be blocked. Keep the air openings (if any) free from lint, hair or the like.
- Never drop or insert any object into any opening on this appliance.
- Do not use outdoors or operate with aerosol (spray) products or with oxygen is being administered.
- Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur before the blades are aligned properly. (See Clipper Maintenance Instructions.)
- During use, do not place or leave appliance where it may be damaged by an animal or exposed to weather.
- To disconnect, turn all controls to "OFF," then remove plug from outlet.

SAVE THESE INSTRUCTIONS

This clipper has been designed for household use.

- | | |
|---|----------------|
| A- Bottom blade | D- Switch |
| B- Blade slide (on Multi-cut (MC) clipper only) | E- Top blade |
| C- Taper lever (on Multi-cut (MC) clipper only) | F- Power screw |

CLIPPER MAINTENANCE

Your Wahl clipper blades were oil and aligned before leaving our factory; however, it is possible for blades to get bumped out of alignment. Blades must be realigned if they have been removed for cleaning or replacement. To determine if realignment is necessary, compare your clipper blades with diagram G.

- If your clipper has a taper lever, position the taper lever in the close cut position. (H)
- End of top blade teeth should be approximately 1/32" (64 mm) back from bottom blade. This is important so that the clipper does not cut too close or allow the moving cutter to touch the skin.
- Extreme left-hand tooth of top blade must be covering or to the left of the first small tooth of bottom blade.
- Extreme right-hand tooth of top blade must be touching the big tooth on the bottom blade.

If blade alignment is incorrect, add a few drops of Wahl Clipper Oil to the blades, turn clipper "On" for a few moments, turn "Off" and unplug. Loosen screws slightly and adjust (steps 2-4 listed above). Tighten screws after blades are aligned. Other than blades this clipper has no user serviceable parts. (diagram I)

OIL (J)

The blades of your new clipper should be oiled every few haircuts. Simply place a few drops of Wahl Clipper Oil on the teeth of the blades. Use only the Wahl Clipper Oil included in the pack. Due to the high speed of your Wahl clipper, the correct type of oil must be used. Do not use hair oil, grease or any oil mixed with kerosene or any solvent, as the solvent will evaporate and leave the thick oil, slowing down the blades. Wahl Clipper Oil is a very thin, natural oil which will not evaporate and will not slow down the blades.

POWER SCREW (Not found on all models of Wahl Clippers)

If your clipper has a power screw, it has been adjusted for peak efficiency before leaving the factory. However, if you need to readjust the clipper, use the power screw to adjust the tension of the blades. To adjust power screw: To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting. (K)

CORD

The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and the unit placed in original hard-car storage pouch (if provided). To adjust power, use the plastic brush, a screwdriver or a thin coin to turn power screw in a clockwise direction until the arm strikes the coil, making a noise. Then, slowly turn power screw out (counterclockwise), just until noise stops. This is the maximum power setting. (K)

WIRING

WARNING: If the supply cord is damaged it must be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard. The wires in the mains lead of this clipper are coloured in accordance with the following code:

Blue Neutral (N) Brown live (L) Green-yellow (E)

This appliance is fitted with a 3-pin plug which has a 3amp fuse fitted. If the plug is not suitable for your socket or becomes damaged, it should be cut off and disposed of and a suitable plug fitted as detailed below. As the colours of the wires in the mains lead of this clipper may not correspond with the colour markings identifying the terminals in your plug proceeds as follows. The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter "N" or coloured BLUE or BLUE. The wire which is coloured BROWN must be connected to the terminal in the plug with the letter "L" or coloured RED or BROWN. The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is marked with the letter "E" or coloured GREEN or GREEN/YELLOW.

TAPER LEVER (Not found on all models of Wahl Clippers)

If your clipper has an adjustable taper lever, it is conveniently located near your thumb (if you're right-handed), so it can easily be adjusted while the clipper is in your hand. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without a guide comb. When the lever is in the uppermost position, the blades will give you the closest cut and leave the hair very short. (diagram H) Pushing the lever downward gradually increases the cutting length. In its lowest position, the taper lever will leave the hair approximately the same length as the 1/8" guide comb. (diagram H)

The taper lever will also extend the use of your blades since a different cutting edge is used in each setting. In addition, if extremely heavy haircutting has jammed the blades, it will help you remove hair that has become wedged between the two blades without removing the blades. While the clipper is running, rapidly move the lever from "close cut" to "longer cut" a couple of times. Doing this each time you've finished using your clipper will help keep the blades free of cut hair and prevent the blades from becoming jammed. The blades may be dull. Either replace them or return them to Wahl for sharpening.

WAHL'S GUIDE TO FOOLPROOF HOME HAIRCUTTING

Before you cut your hair

- Your clipper should be clean, oiled and in perfect working condition.
- If your kit includes a plastic cape, place it about the neck, tying the strings and overlapping the cape portion to prevent hair from falling down into the collar. If no cape is provided, a towel will do nicely.
- Position the person whose hair is to be cut on a stool or chair so that the top of his head is about even with your eyes.
- After combing the hair to remove all tangles, hold the clipper in a relaxed, comfortable grip, with the nameplate under the palm near your index finger. This grip will help you maintain comfortable, accurate cutting control.

NOTE: To use guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the clipper blade. (L)

Depending on the kit you purchased your kit may include one of the following:

Adjustable Guide Combs - allowing multiple cutting lengths in the convenience of a single comb.
Individual Black Guide Combs - providing predetermined lengths indicated on each guide comb.
Individual Color Guide Combs - providing predetermined lengths indicated on each guide comb. Combs are also color coded for quick cutting length reference.

Using adjustable guide combs:

The small adjustable guide comb has five settings from 1/8" to 5/8" (3mm to 16mm) in 1/8" (3mm) increments. (M)

The large adjustable guide comb has five settings from 3/4" to 1-1/4" (19mm to 32mm) in 1/8" (3mm) increments. (N)

Using your thumb, you can change the length of the cut by simply sliding the adjustable lever to the next position. Both adjustable guide combs have position marks and indicators that show position number and cutting length in millimeters for quick and easy setting identification.

The large adjustable guide comb can be used from the ear to the crown of the head. (O1)

The small adjustable guide comb can be used from the nape of the neck to the ear area. (O2)

Using individual (black or colored) guide combs:

Some kits do not include all Wahl guide combs. However, any of these combs (or additional accessories not listed here) may be available from your dealer or can be ordered directly from Wahl.

INDIVIDUAL GUIDE COMB LISTING:

- | | |
|--------------------------------|-------------------------------|
| * 3mm - Black/Red | * 6mm - Black/Purple |
| * 10mm - Black/Dark Blue | * 13mm - Black/Orange/Pink |
| * 15mm - Black/Yellow | * 19mm - Black/Lavender |
| * 22mm - Black/White | * 25mm - Black/Light Blue |
| * 31mm - Black/Black | * 38mm - Black only |
| * Right Ear Taper - Black only | * Left Ear Taper - Black only |

CUTTING HAIR

FOR MEDIUM TO LONG CUTS: (P)

The first step you cut the hair, cut only a small amount until you become accustomed to how long each guide comb leaves the hair. Always start by placing the largest guide comb on the clipper, then use shorter combs (or settings - if using adjustable guide combs) if a shorter length is desired. Remember, between professional haircuts, the hair grows evenly all over the head and a light trimming at the lower neck and sides may be all that is needed to bring back that neat, well-groomed look.

For uniform cutting, utilize the clipper to cut its way through the hair. Do not force it through at a faster rate. Start by combing the hair so it falls into its natural direction.

Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards.

Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and outward through the hair, cutting only a small amount at a time. Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide comb) or use more pressure and less lift from head with the present guide comb.

This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

For the top of the head, you may use a fairly short cut if you use the 1" guide comb (if your kit includes the 1-1/4" or 1-1/2" guide comb, you may utilize this for a slightly longer cut). With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length. Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb or fingers and the head. Comb frequently to remove trimmed hair and check for uneven strands.

TAPERING AROUND EARS:

USING LEFT AND RIGHT EAR GUIDE COMBS:

The Left and Right Ear Guide Combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.

TO TAPER THE AREA BORDERING THE LEFT EAR:

Attach the Left Ear Taper Comb to your clipper and stand facing the left ear. While holding the clipper at a slight angle behind the head, position the guide comb just back of the left ear at the hairline. Then move the clipper in a small hair circle pattern around the left ear toward the front of the head. Depending on the length of hair you are seeking, you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the clipper upward and forward being mindful of the ear. This will allow you to guide hair into the comb towards the clipper blades.

Note: You may also achieve a tapering of sideburns by including the sideburn area as you begin to move the clipper around the ear.
TO TAPER THE AREA BORDERING THE RIGHT EAR:
Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.
Use caution cutting the area around the ear as described in the following section.

OUTLINING: (Q)


No attachments are needed. (On a multi-cut clipper, push the taper lever up to the "close-cut" position.) Comb hair into desired style. Starting between the ear and the sideburns, as shown at left, hold clipper with corner edge of blade against the hairline. Slowly follow the desired outline of the hair over, around and behind the ears.

For defining sideburns and the back of the neck, hold the clipper upside down, against the skin at the desired length and move down.

Comb hair over the back of the head so the sides are even. Check for uneven spots throughout the haircut.

CREW CUTS AND SHORT CUTS (R)

Start with the longest guide comb on top of the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair, as shown. Use the same procedure from the lower side to the upper side of the head, as shown. Then cut the hair against the direction in which it grows, from the front to the crown, and even up the cut with the sides. To give a "flat-top" look, hair on top of the head must be cut over the top of a flat comb, rather than using the guide comb. Use close-cutting guide combs to "taper" the hair down to the neckline, as desired. Comb hair and check for uneven spots. Outline sideburns and neckline as previously described. If a short, tapered cut on the sides and back is desired, follow diagram S. The five basic areas illustrated on the Wahl haircutting guide are your "road map" to easy, do-it-yourself haircutting. For tips on the latest trends and fashions in haircutting, visit us at www.wahl.com.

If you reside within the EU and your unit is marked with the following symbol  do not discard in trash. This product is to be returned to the appropriate municipal waste collection facility for recycling and recovery.

E INSTRUCTIVO PARA EL USO Y EL CUIDADO DE LA MAQUINA CORTADORA DE LA CABEZA

MEDIDAS IMPORTANTES DE SEGURIDAD:

Al utilizar el aparato eléctrico siempre se deben tomar ciertas precauciones, tal como las siguientes. (Lea todo el instructivo antes de usar la cortadora)

PELIGRO

- Para reducir el riesgo de electrocución:
- No toque la cortadora si se ha caído al agua. Desenchufela de inmediato. La cortadora está eléctricamente cargada - por dentro.
 - No la use mientras se está bañando o duchando.
 - No ponga la máquina en el agua en lugares de donde pueda caer al piso, a una bañera o lavabo. No la ponga en contacto con agua u otros líquidos. (Vea Clipper Maintenance Instructions.)
 - Inmediatamente después de usar la cortadora, desenchufela siempre de la toma de corriente.
 - Siempre desenchufe la cortadora antes de limpiarla.

ADVERTENCIA

Para reducir el riesgo de quemaduras, descargas eléctricas o lesiones personales:

- No deje nunca la cortadora sola mientras está enchufada.
- Es de suma importancia que haya una estricta supervisión mientras la cortadora sea utilizada por niños o por personas físicamente incapacitadas, o cuando ellos se encuentren en las proximidades.
- Utilice solamente esta cortadora de acuerdo con las instrucciones de este manual. No la utilice con accesorios que no hayan sido recomendados por el fabricante.
- No haga nunca funcionar esta cortadora si está dañado el cable o el enchufe, o si no funciona bien, o si se ha caído al agua, al agua o al agua. Envíela a Wahl Corporation, para examinarla y repararla.
- No acerque el cable a superficies calientes.
- No haga funcionar la cortadora con los orificios de ventilación cerrados o mientras está en una superficie comestible, como la comida, para evitar que se ensucie, o cuando los orificios de ventilación, es importante que los mantenga libre de pelusa, cabello o cosas semejantes.
- No deje caer, ni meta objetos por los orificios de la cortadora.
- No utilice la cortadora al aire libre, o donde se estén utilizando aerosoles (productos de pulverización), o en áreas donde se admiten incendios.
- No utilice la cortadora si tiene accesorios defectuosos, o si tiene una hoja dañada, ya que este puede producir lesiones personales. Antes de usarla, asegurese que estén bien alineadas las hojas. Vea el instructivo de mantenimiento.
- Durante su uso, no ponga o deje la cortadora en lugares donde puede ser dañada por un animal o ser expuesta a los cambios de clima.
- Desconecte la cortadora, deslice el interruptor a la posición de "OFF," y desenchufela de la toma decorativa.

GUARDE ESTAS INSTRUCCIONES

- | | |
|--|-----------------------------------|
| A- Hoja Extrema | D- Interruptor |
| B- Solo en máquinas Multi-Cut (MC) | E- Hoja Interna |
| C- Tornillo de Control Solo en máquinas Multi-Cut (MC) | F- Tornillo Regulador de Potencia |

MANEJEMIE NTO DE LA MAQUINA CORTADORA WAHL

Las hojas de la cortadora Wahl son lubricadas y alineadas de fábrica. No obstante, hay la posibilidad que las hojas se desalinen debido a un golpe. Además, si ha quitado las hojas de la cortadora para limpiarlas o reemplazarlas, las debe alinear de nuevo. Para determinar si esto es necesario, **compare las hojas de la cortadora con G.**

- Si su cortadora tiene una palanca control posición en el nivel de corte más bajo, la palanca de control está en la hoja superior de la hoja inferior.
- Para que la cortadora no corte muy cerca, ni toque la piel, debe estar entre 1/32" (6.4mm) la parte más alta de la hoja superior de la hoja inferior.
- El diente extremo de la izquierda de la hoja superior debe cubrir, o estar a la izquierda del primer diente pequeño de la hoja inferior.
- El diente extremo de la derecha de la hoja superior debe tocar el diente grande de la hoja inferior.
- Si están fuera de alineación las hojas, les debe daré unas gotas de aceite. (Encienda brevemente la cortadora, luego apaguéala y desenchufela. Afloje los tornillos solo un poco y ajuste. Pasos 2 a 4 indicados arriba) adecuadamente las hojas. Apriete de nuevo los tornillos después de alinear las hojas. Aparte de las cuchillas ningún otro mecanismo debe ser reparado por el usuario. (I)

ACEITE (J)

Al utilizar por primera vez la cortadora Wahl, y después de varios cortes de cabello, se deberán lubricar los dientes de las hojas de la cortadora. Debido a la alta velocidad de la cortadora Wahl, el mejor uso un tipo especial de aceite. El aceite Wahl, el cual viene incluido en el empaque, es el más apropiado, ya que es un aceite delgado y natural. No se evaporará, ni disminuirá la velocidad de las hojas de la cortadora. Es de suma importancia que no utilice grasa o aceite para cabello, ya que el aceite de la caja original o de cualquier otro tipo de solvente, ya que éste se evapora y dejará el aceite espeso, lo cual disminuirá la velocidad de las hojas de la cortadora Wahl.

TORNILLO REGULADOR DE POTENCIA (No se encuentra en todos los modelos de las cortadoras Wahl)
Si su cortadora Wahl dispone de un tornillo regulador de potencia ha sido ajustado de fábrica para que le de un rendimiento máximo. No obstante, en caso de que en su casa el voltaje sea alto, puede necesitar un reajuste del mismo regulador. Para ajustar la potencia, utilice el capullo de plástico que viene incluido en el empaque, o un desarmador o una moneda delgada, girando el tornillo regulador de potencia en sentido de las manecillas del reloj hasta oír un ruido producido por el brazo al tocar la bobina. Después gire lentamente el tornillo regulador en sentido contrario de las manecillas-hora del reloj hasta que cese el ruido. Este es el ajuste de máximo rendimiento. (K)

CABLE

El cable no debe usarse nunca para sujetar la cortadora. Debido a que ha de mantenerse la libertad de movimiento, hay que procurar que el cable no se doble o retuerza o se obstruya. Cuando gire la cortadora, el cable ha de ser enrollado en la cortadora hacia el lado izquierdo y no hacia el lado derecho. Si el cable se enrolla en la cortadora, la cortadora puede dañar el cable y el cable puede dañar la cortadora. Si **su cortadora posee un enchufe polarizado:** Para reducir el riesgo de electrocución, este aparato eléctrico posee un enchufe polarizado (una de las "patas" es más ancha que la otra). Este tipo de enchufe encaja perfectamente en una toma de corriente, solamente en una dirección. En el caso de que el enchufe no encaje perfectamente en la toma de corriente, invierta el enchufe y pruebe de nuevo. En caso de que el enchufe no encaje, consulte con un electricista cualificado para instalar la toma de corriente adecuada. No intente modificar el enchufe de ninguna forma.

PALANCA DE CONTROL DE LAS HOJAS (solo en modelos Multi-cut)

Algunas cortadoras Wahl disponen de una palanca de control para ajustar las hojas. Para la persona destra, la palanca de control viene cómodamente situada cerca del dedo pulgar, de modo que la puede ajustar fácilmente cuando la tiene en la mano. La palanca de control aumenta la versatilidad de la cortadora, permitiendo cambiar de una forma gradual la intensidad del corte sin usar un peine accesorio. Cuando la palanca de control está en la posición más alta, las hojas darán un nivel de corte mayor y dejarán el cabello más corto. Bajando la palanca de control, causará un nivel de corte menor, dejando el cabello más largo. En la posición más baja, la palanca de control dejará el cabello a la misma longitud que el peine accesorio No. 1.

La palanca de control prolongará la vida útil de las hojas de la cortadora, ya que en cada ajuste se utiliza un filo de corte diferente. Además, si ha cortado mucho cabello y las hojas se atoran con el mismo, la palanca de control ayudará también de en medio, sin que tenga que remover las hojas de la cortadora, utilizando el siguiente método. Mientras la cortadora está enchufada, mueva la palanca de control hacia la otra, o sea, del corte corto al corte largo. Haga esto cada vez que utilice la cortadora Wahl para mantener las hojas libres de cabello. Pero, en caso de que la cortadora deje de cortar bien el cabello, y no ayudo al anterior, puede ser que las hojas necesiten afilarse. De modo que, las debe reemplazar o devolver a: Wahl Clipper Corp.

GUÍA WAHL PARA CORTAR EL CABELLO EN CASA SIN PROBLEMAS:

Antes de cortar el cabello:

- La cortadora Wahl debe estar limpia, lubricada y en perfectas condiciones de uso.
- Si el empaque de la cortadora incluye una capa protectora de plástico colocada alrededor del cuello de la persona, átandole los cordones. Para evitar que entre el cabello por el cuello, meta los extremos de la capa hacia adentro. Pero, si el empaque no incluye una capa protectora de plástico, una toallita dará el mismo resultado.
- Síguete a la persona en un banco o silla, de modo que la parte superior de la cabeza esté a la misma altura de sus ojos.
- Desenrede el cabello de la persona, peinándolo. De forma cómoda y relajada, mantenga la cortadora en su mano con la placa de identificación debajo de la palma cerca de su dedo índice. De este modo podrá cortar el cabello, manteniendo un control preciso y cómodo.

NOTE: Para instalar el peine accesorio, simplemente deslice los dientes hacia arriba sobre las hojas de la cortadora encañelo firmemente en la parte inferior de las hojas. (L)

Dependiendo en el modelo que Usted compra, el juego de accesorios podría contener lo siguiente:

Peines Individuales - permiten longitudes variables de corte en un solo peine accesorio.

Peines ajustables - permiten longitudes fijas de corte, indicadas en cada uno de ellos. Estos peines pueden ser todos Negros, o codificados por color en algunos modelos.

Utilización de peines ajustables

El peine ajustable pequeño tiene cinco posiciones de corte, variando de 1/8 a 5/8 de pulgada (3mm a 16mm). (M)

Presionando la lengüeta de ajuste con el dedo pulgar, se puede deslizar el peine para regular en las cinco diferentes longitudes de corte. Cada una de ellas está indicadas en milímetros a través de la ventanilla, lo cual permite fácil ajuste e identificación.

El peine ajustable grande puede ser utilizado para cortar desde el oído hasta la coronilla de la cabeza. (O1)

El peine ajustable pequeño debe ser utilizado para cortar desde la nuca hasta la altura de los oídos. (O2)

Utilización de peines individuales

Algunos kits no incluyen todos los peines, pero los peines de corte disponibles en Wahl. Sin embargo, cualquiera de ellos podría estar disponible en su tienda, junto con todos los accesorios de Wahl, o puede comprarlos directamente de Wahl! solo en los Estados Unidos.

LISTADO DE PEINES INDIVIDUALES (FJOS) DISPONIBLES:

- | | |
|---|---|
| * 3mm - Negro o Rojo | * 6mm - Negro o Morado |
| * 10mm - Negro o Azul Marino | * 13mm - Negro o Naranja/Rosado |
| * 15mm - Negro o Amarillo | * 19mm - Negro o Verde |
| * 22mm - Negro o Blanco | * 25mm - Negro o Negro claro |
| * 31mm - Negro o Blanco | * 38mm - Negro solamente |
| * Peine Oreja Derecha - Negro solamente | * Peine Oreja Izquierda - Negro solamente |

COMO CORTAR EL CABELLO

CORTE NORMAL, CORTE MEDIO Y CORTE LARGO (P)

La primera vez que vaya a cortar el cabello únicamente corte una cantidad pequeña, hasta que se acostumbre a la longitud que cada peine accesorio dejará al cabello. Siempre comience colocando a la cortadora el peine accesorio más grande, y si desea una longitud de cabello más corta, utilice un peine más pequeño. Acertándose, entre cortes de cabello hechos por un profesional, el cabello crece de forma pareja, y para volver a tener un aspecto limpio y aseado puede lo único que necesite es un recorte ligero de la nuca y de ambos lados de la cabeza. Si el cliente no contiene todos los peines accesorios de Wahl, no se preocupe. Los puede encontrar en las tiendas distribuidoras de Wahl, o simplemente utilizando el formulario adjunto. Los puede ordenar directamente a Wahl. Si desea un corte uniforme, deje que la cortadora avance suavemente por el cabello. No la fuerze a un ritmo más rápido, y utilice el siguiente método:

- Peine el cabello de manera que adopte su posición natural.
- Coloque el peine accesorio más grande a la cortadora. Comience a los lados de la cabeza, recordando desde abajo hacia arriba. Con los dientes de la parte superior de la cabeza y volviendo arriba, mantenga la cortadora ligeramente sobre el cabello, pero pegado a la cabeza. Levante lentamente la cortadora en movimientos verticales hacia arriba y hacia afuera.

Asegurese cortar cantidades pequeñas de cabello a la vez.

Repita la misma operación por ambos lados de la cabeza y por la parte posterior de la misma.

1 Start by combing the hair so it falls into its natural direction.

Place the largest guide comb onto your clipper and start by trimming the sides from the bottom upwards.

Hold the clipper lightly against the hair, with teeth of the guide comb pointing up but flat against the head. Slowly lift the clipper up and outward through the hair, cutting only a small amount at a time.

Repeat around sides and back of head.

If you desire shorter hair, either change to a shorter guide comb (or setting - if using adjustable guide comb) or use more pressure and less lift from head with the present guide comb.

This entire procedure requires practice, and it is always better to leave too much hair the first few haircuts.

For the top of the head, you may use a fairly short cut if you use the 1" guide comb (if your kit includes the 1-1/4" or 1-1/2" guide comb, you may utilize this for a slightly longer cut). With the teeth flat against the head, slowly start trimming from the front to the back. Again, it is better to leave the hair longer the first few haircuts.

FOR LONGER HAIR ON TOP:

By not using a guide comb, a longer cut can be achieved. Use either a barber comb or a regular comb and lift the hair on top of the head, cutting over the comb, or grasp the hair between the fingers and cut to desired length. Continue this procedure from the front to the back of the head, gradually cutting the hair shorter by reducing the space between the comb or fingers and the head. Comb frequently to remove trimmed hair and check for uneven strands.

TAPERING AROUND EARS:

USING LEFT AND RIGHT EAR GUIDE COMBS:

The Left and Right Ear Guide Combs have a built in taper ranging from 1/8" to 1/2". By following the outline of the ear with the appropriate comb you achieve a gradual taper and blending without having to use multiple combs.

TO TAPER THE AREA BORDERING THE LEFT EAR:

Attach the Left Ear Taper Comb to your clipper and stand facing the left ear. While holding the clipper at a slight angle behind the head, position the guide comb just back of the left ear at the hairline. Then move the clipper in a small hair circle pattern around the left ear toward the front of the head. Depending on the length of hair you are seeking, you may need to take several small strokes as you proceed around the ear. When doing so, slowly move the clipper upward and forward being mindful of the ear. This will allow you to guide hair into the comb towards the clipper blades.

Note: You may also achieve a tapering of sideburns by including the sideburn area as you begin to move the clipper around the ear.
TO TAPER THE AREA BORDERING THE RIGHT EAR:
Attach the Right Ear Guide Comb to your clipper. Stand facing the right ear and repeat the process described above for the left ear.
Use caution cutting the area around the ear as described in the following section.

OUTLINING: (Q)
No attachments are needed. (On a multi-cut clipper, push the taper lever up to the "close-cut" position.) Comb hair into desired style. Starting between the ear and the sideburns, as shown at left, hold clipper with corner edge of blade against the hairline. Slowly follow the desired outline

